

USE INSTRUCTIONS

HEATED BAG – 14” (6400002) – 55W

IMPORTANT SAFETY MESSAGES: To prevent personal injury and damage, read all instructions prior to use



WARNING:

- If extension cord is used to power the Heated Bag, a grounded cord rated for outdoor use is recommended. Failure to follow this warning can cause overheating or fire resulting in property damage or personal injury.
- Do not use with any power supply other than the one provided or if power supply is broken or damaged. Failure to follow this warning can cause overheating or fire resulting in property damage or personal injury.
- Do not expose power supply to water. Failure to follow this caution may cause premature heater failure and loss of function.
- Do not heat any flammable liquid or flammable object in the bag. Failure to follow this warning can cause overheating or fire resulting in property damage or personal injury.



CAUTION

- Do not open interior zipper, tamper with, or modify this bag in any way. Failure to follow this caution may cause premature heater failure and loss of function.
- If moisture is present, it is recommended to disconnect power before handling bag to prevent possible electrical shock.
- Do not exceed Heated Bag maximum weight capacity of 50lbs.

Note: The heated bag is thermostatically controlled and will not provide heat if the ambient temperature is 50F (10C) or higher.

HEATED BAG USE INSTRUCTIONS

1. Place lithium-ion battery charger into bag.
2. Insert extension cord into bag through the pass-through located on the inside of the side pocket and plug lithium-ion battery charger into extension cord.
3. Remove power supply from the side pocket.
4. Confirm connection of the barrel connectors.
5. Plug FreezArmor power supply into 120 VAC outlet.
6. Plug extension cord into 120 VAC outlet.
7. Close bag lid and zip shut.



WARRANTY

The Phillips & Temro Industries warranty statement is located on the website at phillipsandtemro.com/terms.